

FW85 ALUMINIUM MULII-FUNCTIONAL FORKLIFT

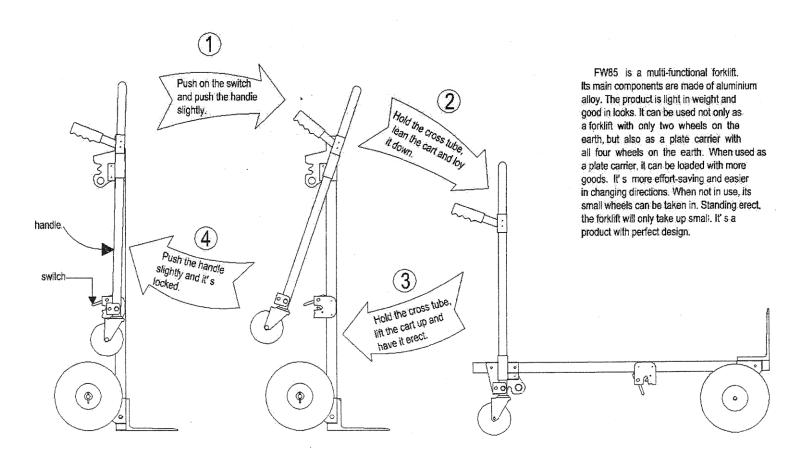

FW-85

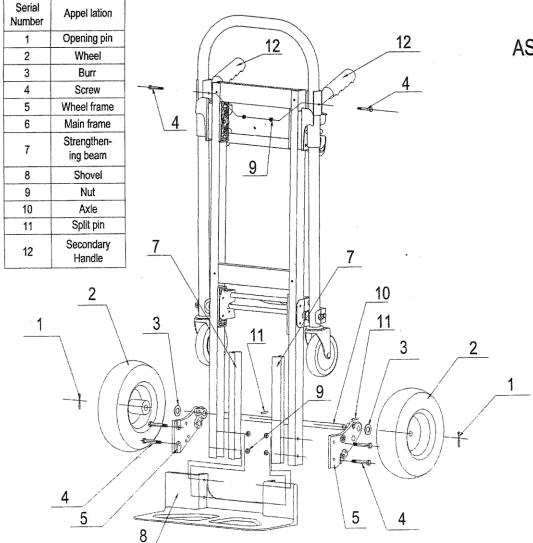

ASSEMBLY INSTRUCTION

LOWER PART ASSEMBLY:

First, assemble the shovel, strengthening beam and wheel frame to the main frame as shown in the picture, and drive the screws and nuts in, Second. put the axle through the wheel frame and knock the split pin In. Then put the wheels on and insert the pin with its rear open. Last, after adjustment, tighten up the screws.

UPPER PART ASSEMBLY:

Turn the secondary handle of component 12 to the position as shown in the picture. Drive the screws in, tighten up the nuts and the assembly is finished.